


UNO-T



Package Content

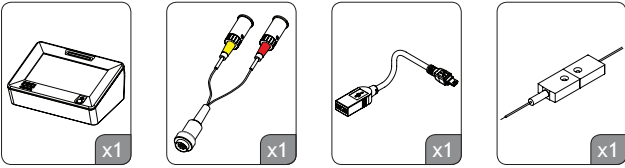

Summary


1 Humidifier  ~3'

2 Heating devices  ~4'


3 Setting up UNO  ~6'

Heating Devices

BASE & LID

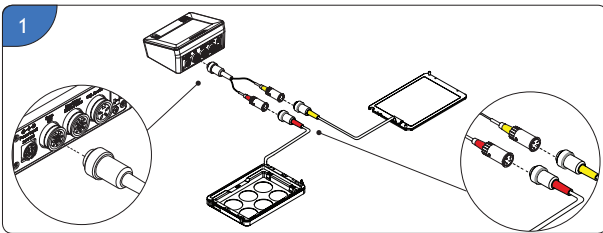

OBJECTIVE HEATER (OPTIONAL)

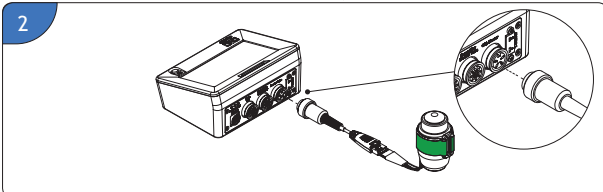

Setting up UNO

1 Selection of Chamber & Insert

- Press 'Settings'
- Press 'Chamber & Insert'
- Select chamber and insert in use, then press 'OK'

2 Selection of Control Mode

- Press 'Settings'
- Press 'Control Mode'
- Select the Control Mode and press 'Save'

NOTE: "Chamber" control mode uses sensors embedded in the chamber body. Accuracy +/- 0.3°C from set-point, if room T remains within +/- 0.3°C. "Sample" control mode requires inserting the provided temperature sensor in a reference well. Accuracy +/- 0.1°C regardless of room temperature.


Setting up UNO

3

Humidity control set-up

- Check the 'humidity control enabled' box
- Input room temperature
- Press 'Save'


NOTE: it is important to enter the right room temperature. You may check it with the help of the fine gauge thermocouple (green wire)

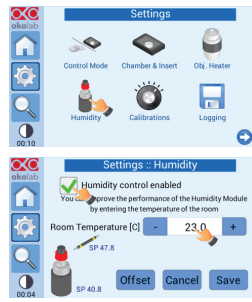

4

Objective Heater (optional)

- Press 'Enabled'
- Press 'OK'

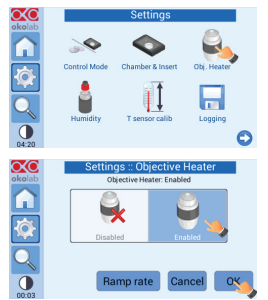

QUICK INSTALLATION & USER GUIDE

Temperature range	From 3 °C above ambient to 60 °C
Temperature accuracy	± 0.1 °C in sample feedback mode ± 0.3 °C in chamber feedback mode, if room temperature remains within ± 1 °C
Controller dimensions	103 x 130 x 59 mm

